

FIG. 1

FIG. 2

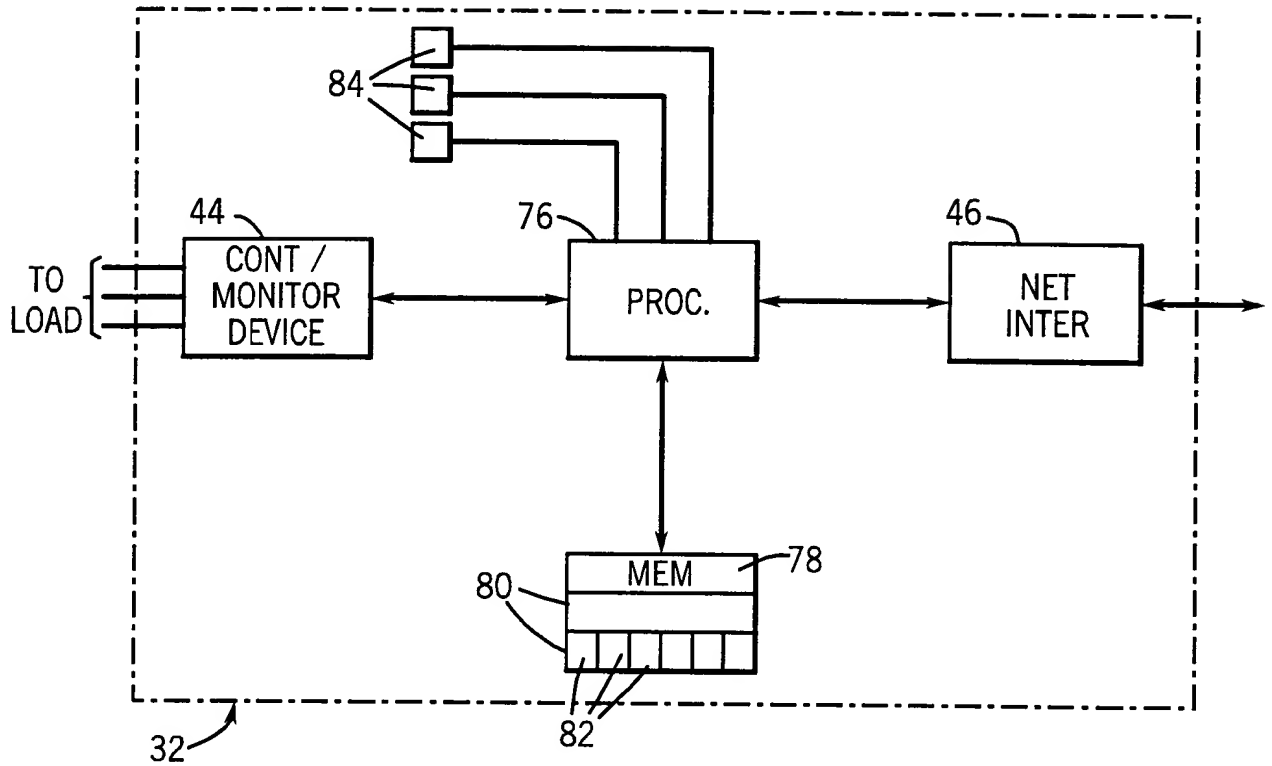
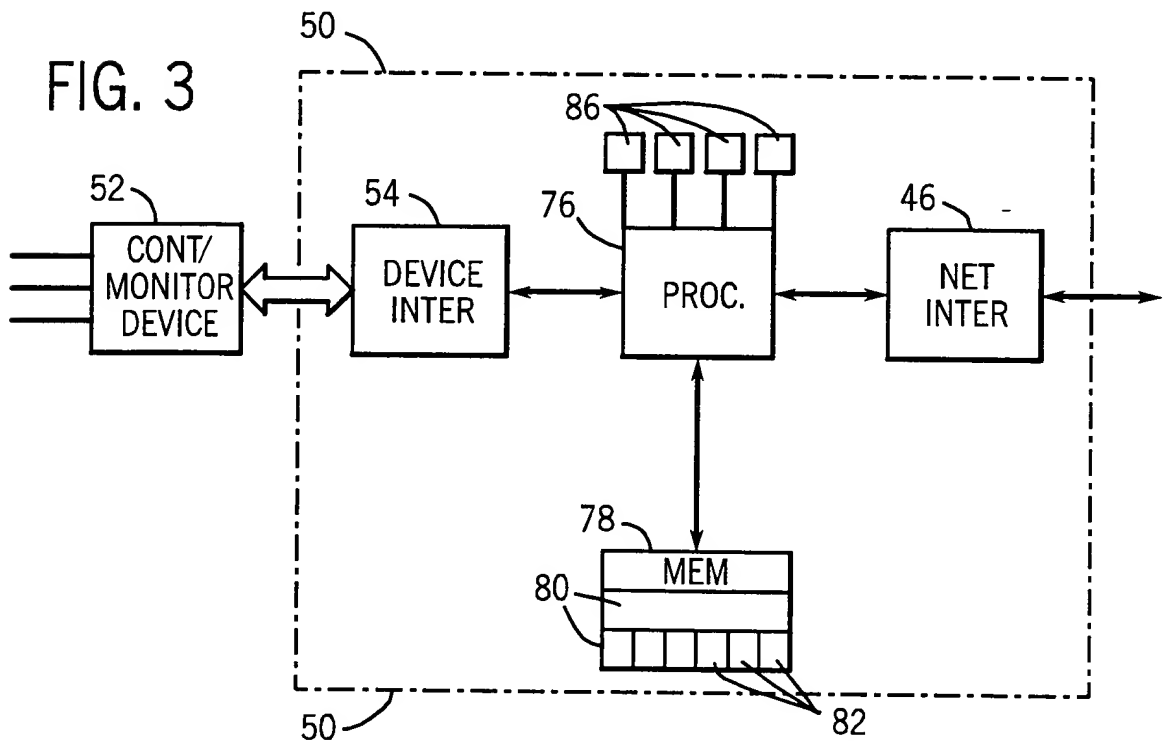


FIG. 3



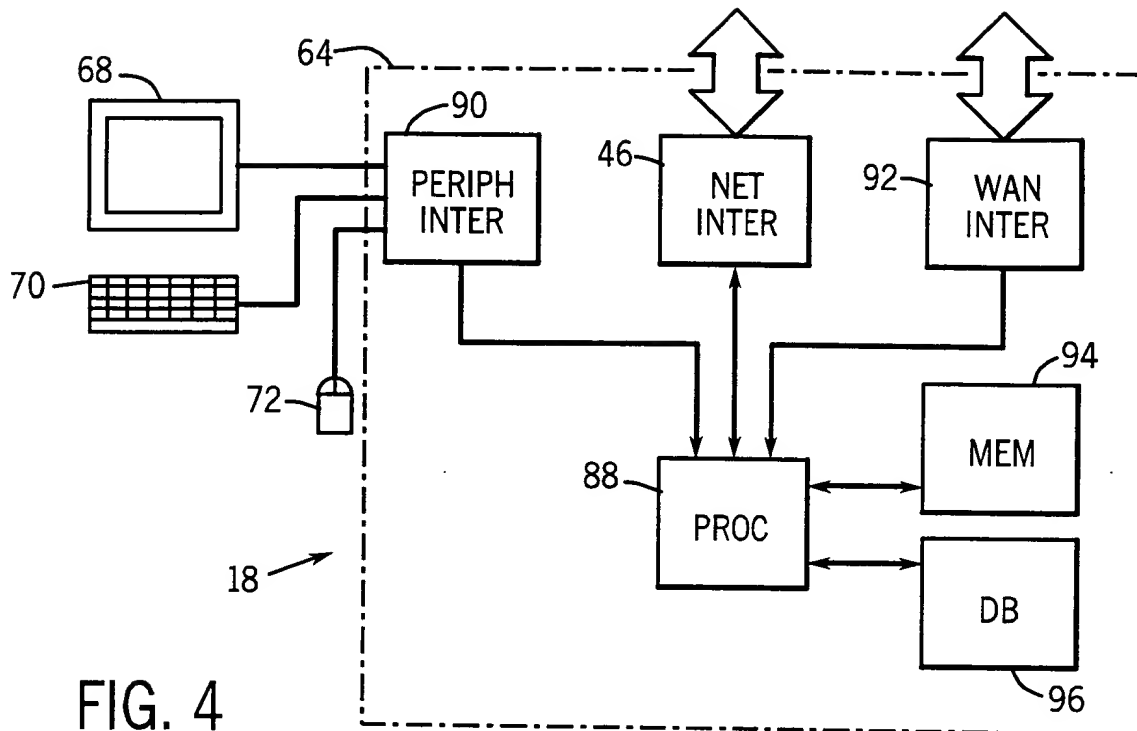
[illegible]

FIG. 4

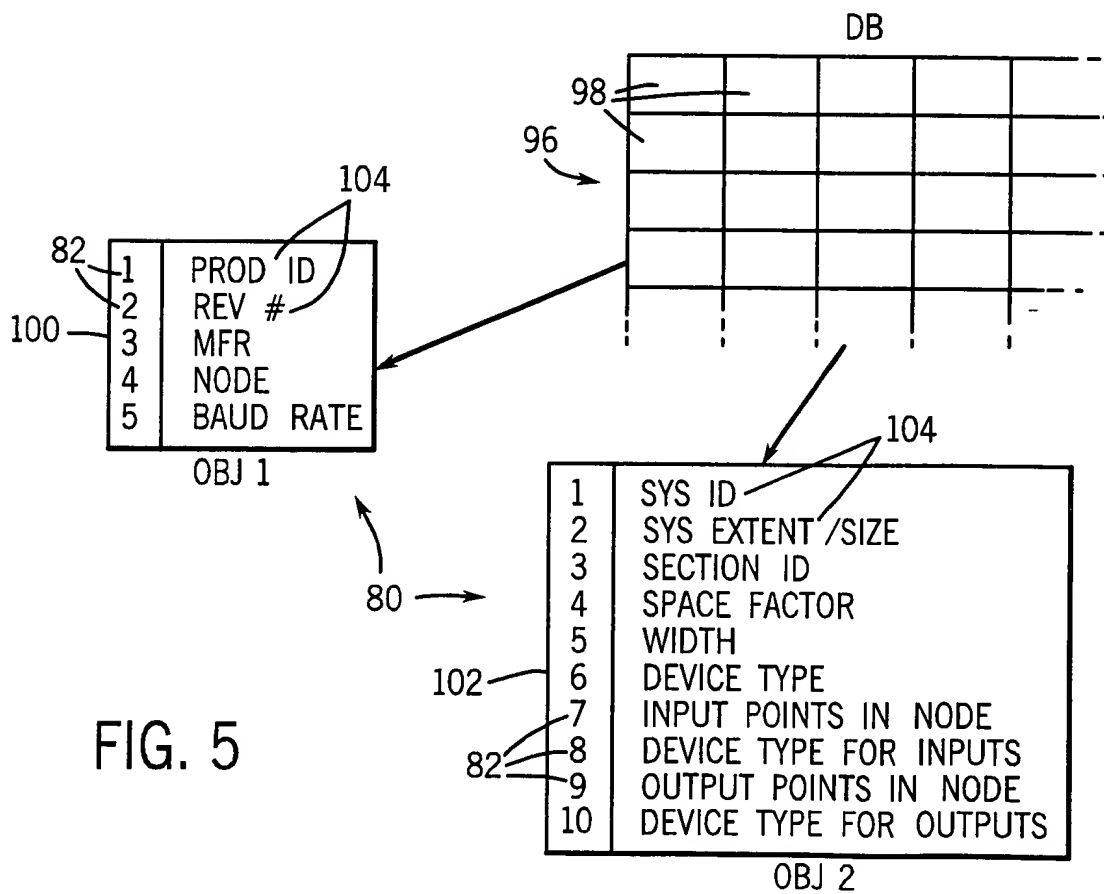


FIG. 5

FIG. 6

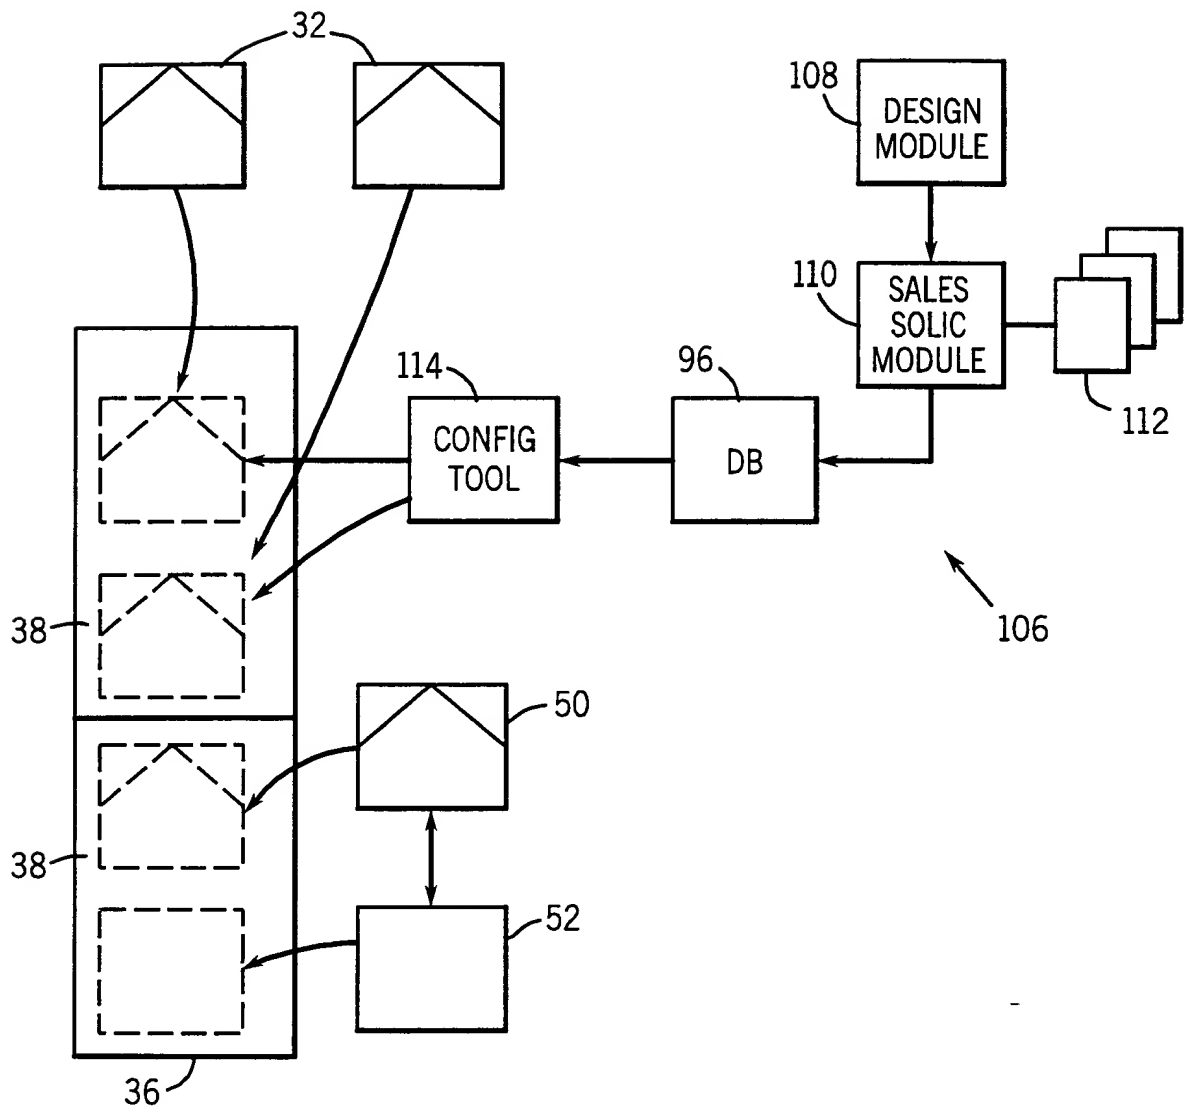
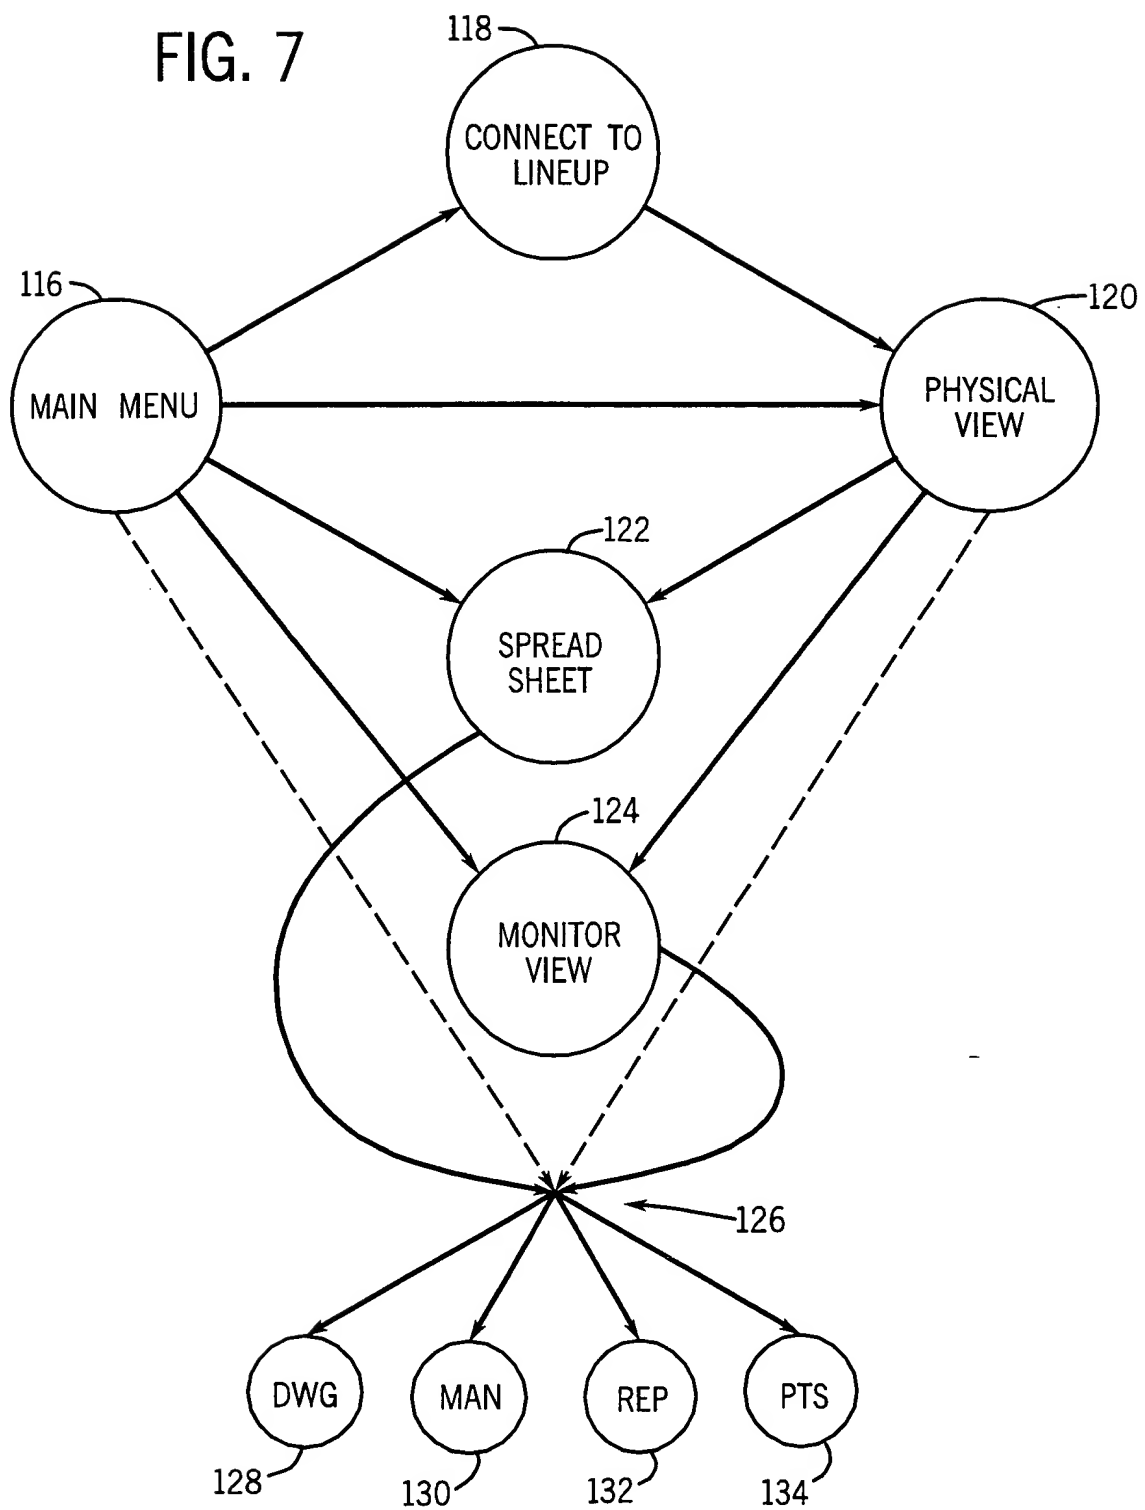


FIG. 7



140

100
 90
 80
 70
 60
 50
 40
 30
 20
 10
 0

FIG. 9

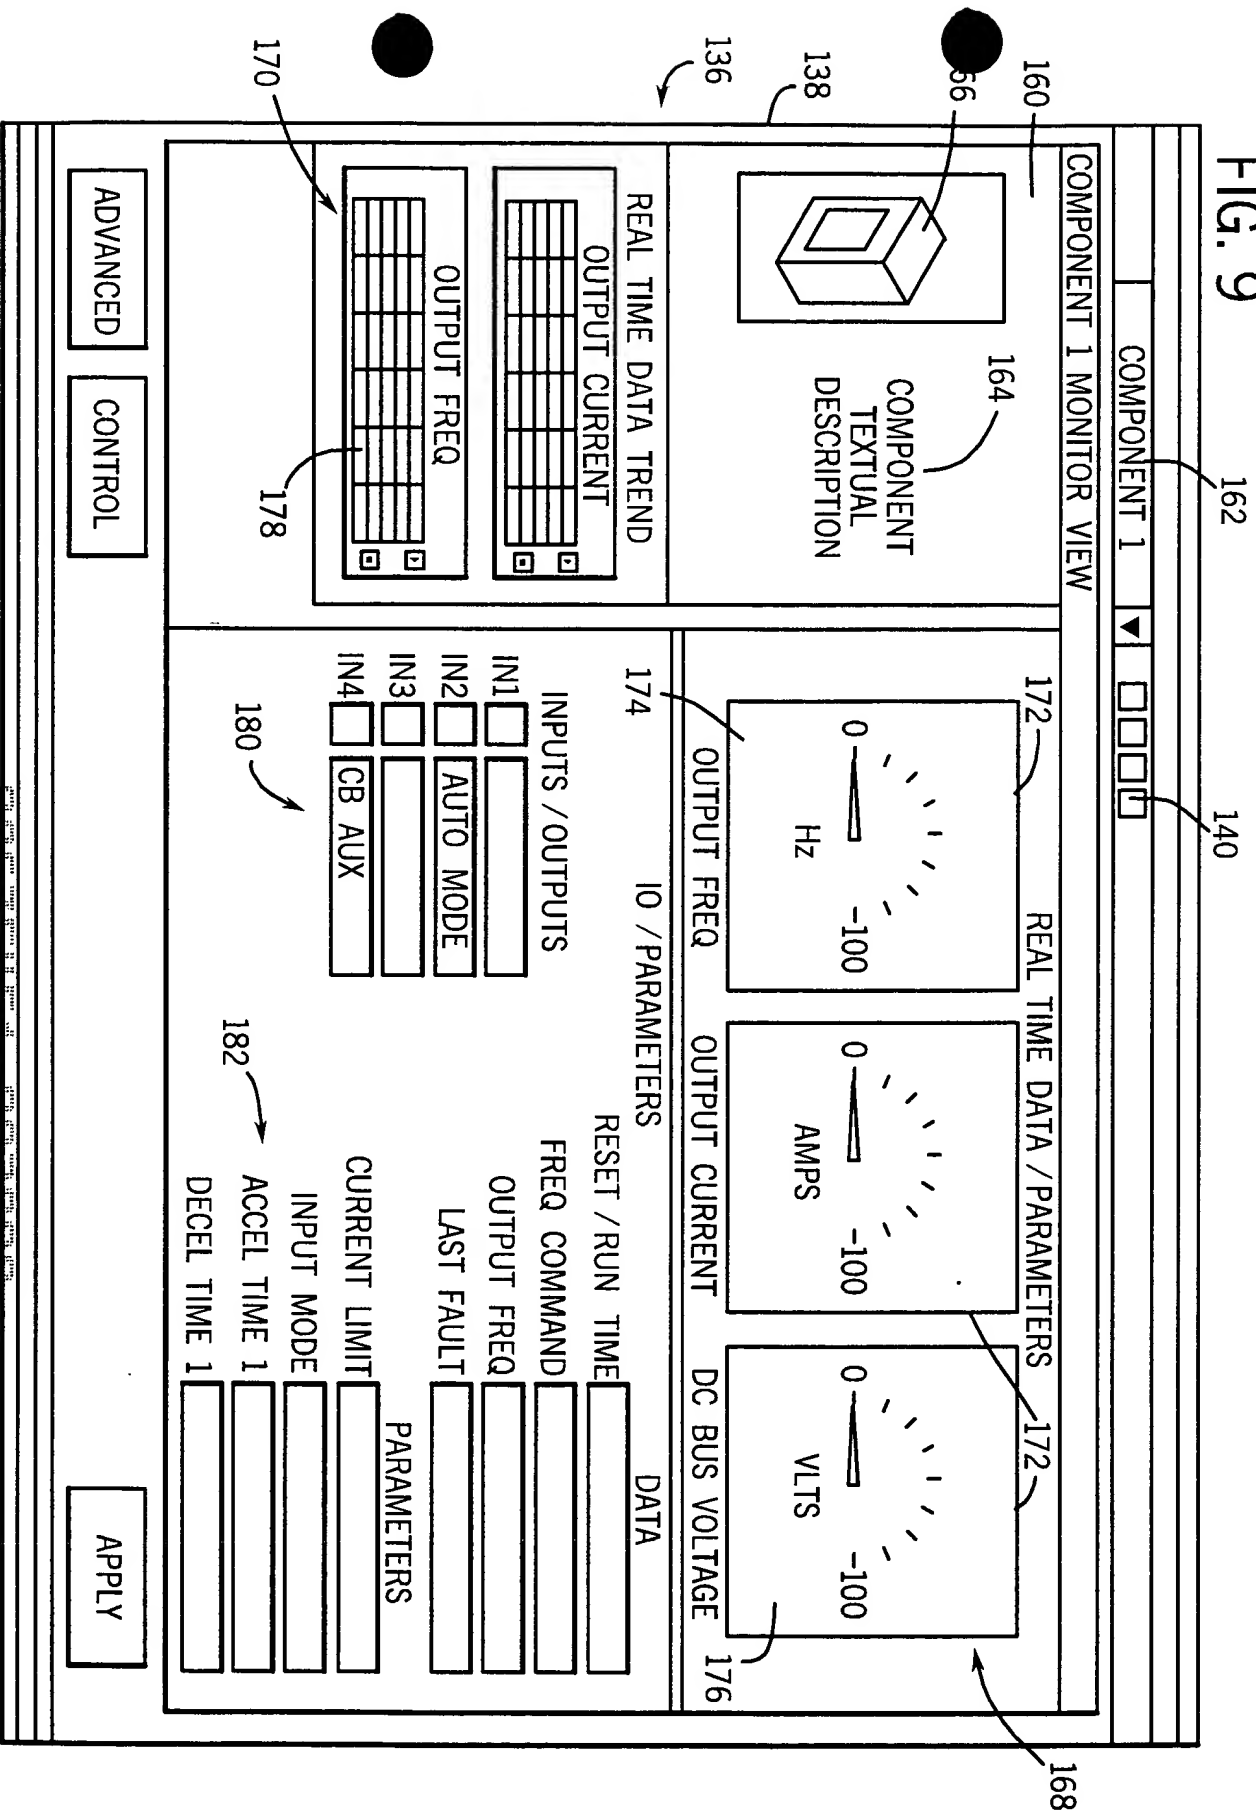
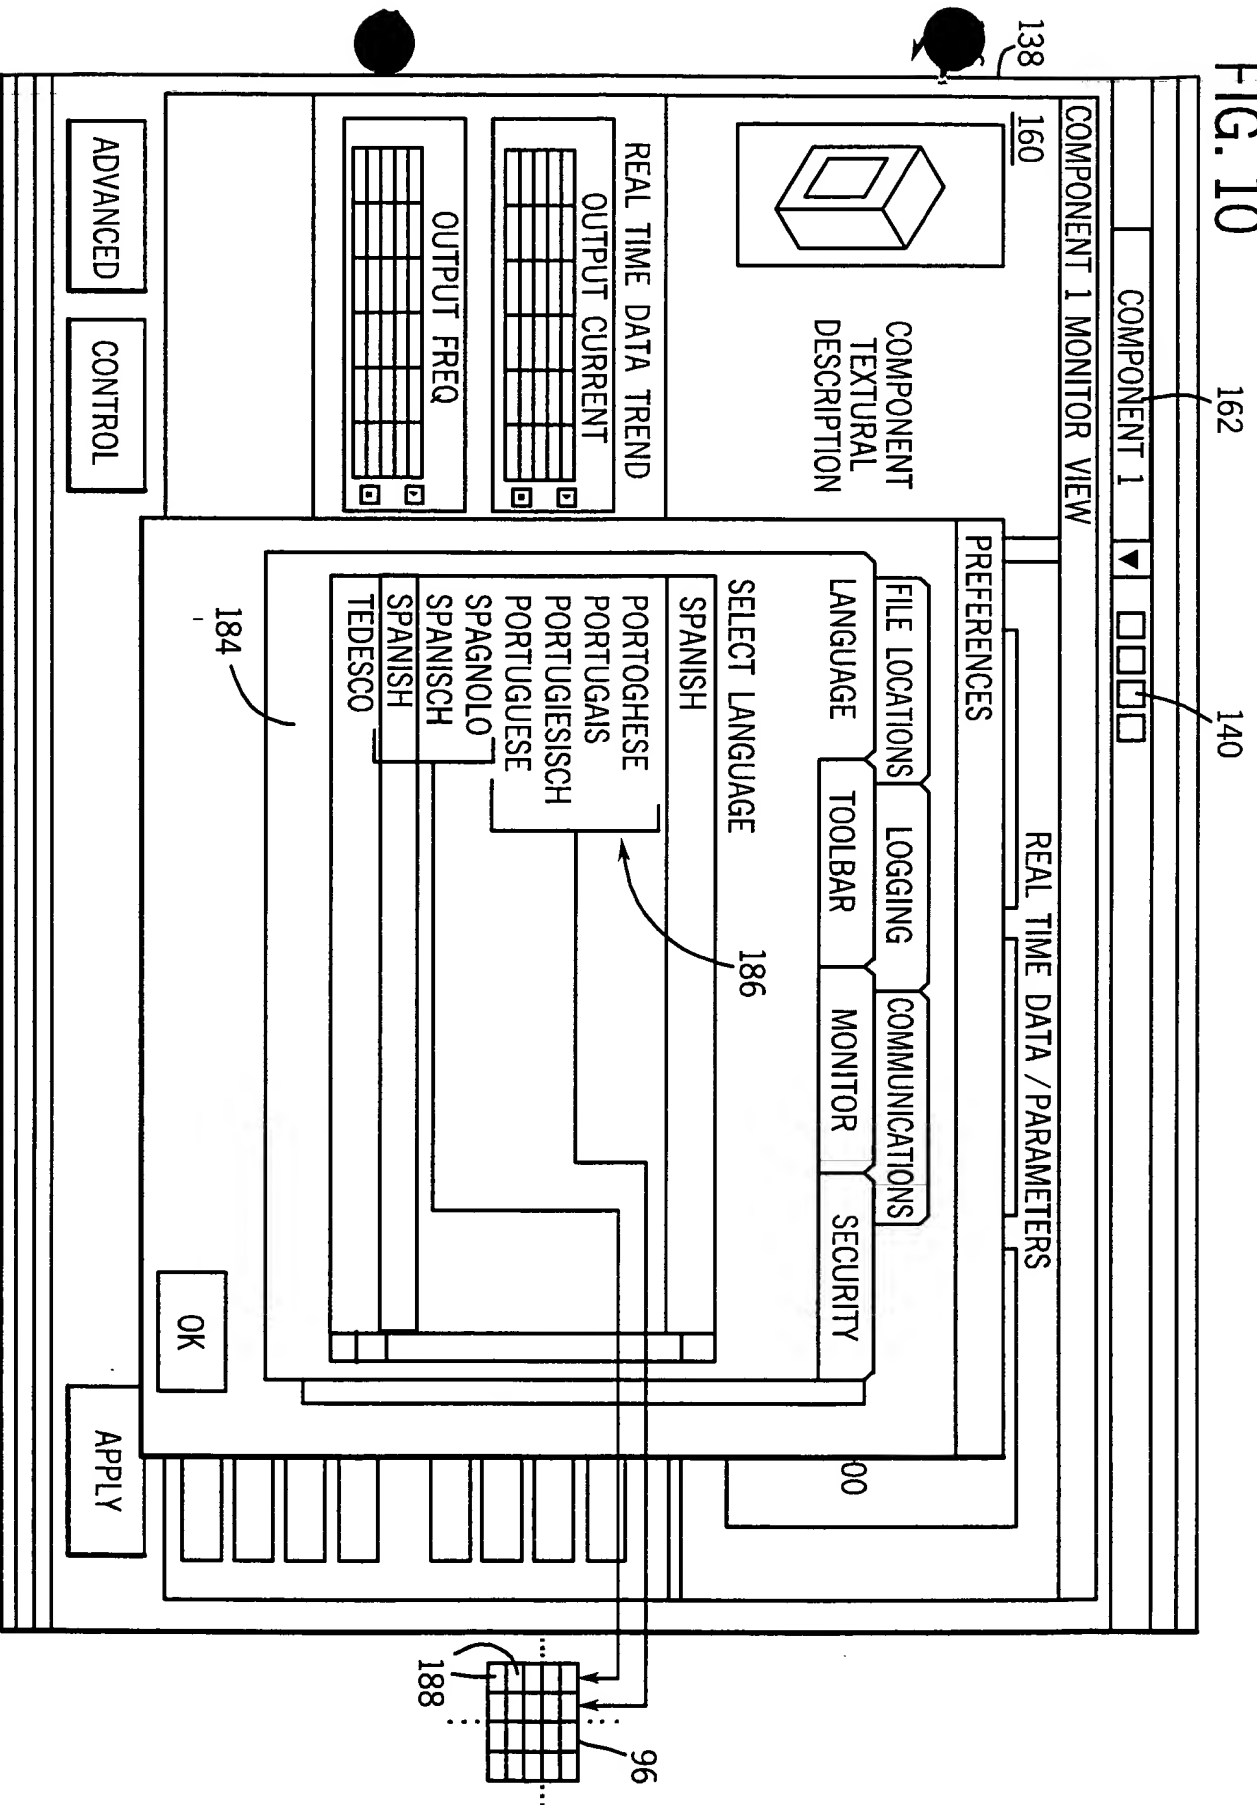


FIG. 10



140

196

158

[illegible]

FIG. 13

144

140

SYSTEM 1

ELEVATION VIEW SYSTEM 1

MANUALS

SELECT SORT

NONE

SELECT FILTER

NONE

ASCENDING

DESCENDING

NONE

NAME

PUBLICATION

DESC.

DATE

NAME 1

DISCONNECT SWITCHES

NAME 2

DESCRIPTION 2

NAME 3

DESCRIPTION 3

1A-MCB

1E-FVNR

1G-FVNR

1

2

3

5

6

COMP 5

COMP DESIG

COMP 23

MP DESIG

READY

RUNNING

WARNING

FAULT

NO COMMUNICATION

EDIT SECTION

DOCUMENTATION

DRAWINGS

REPORTS

MANUALS

SPARE PARTS

APPLY

000000-000000

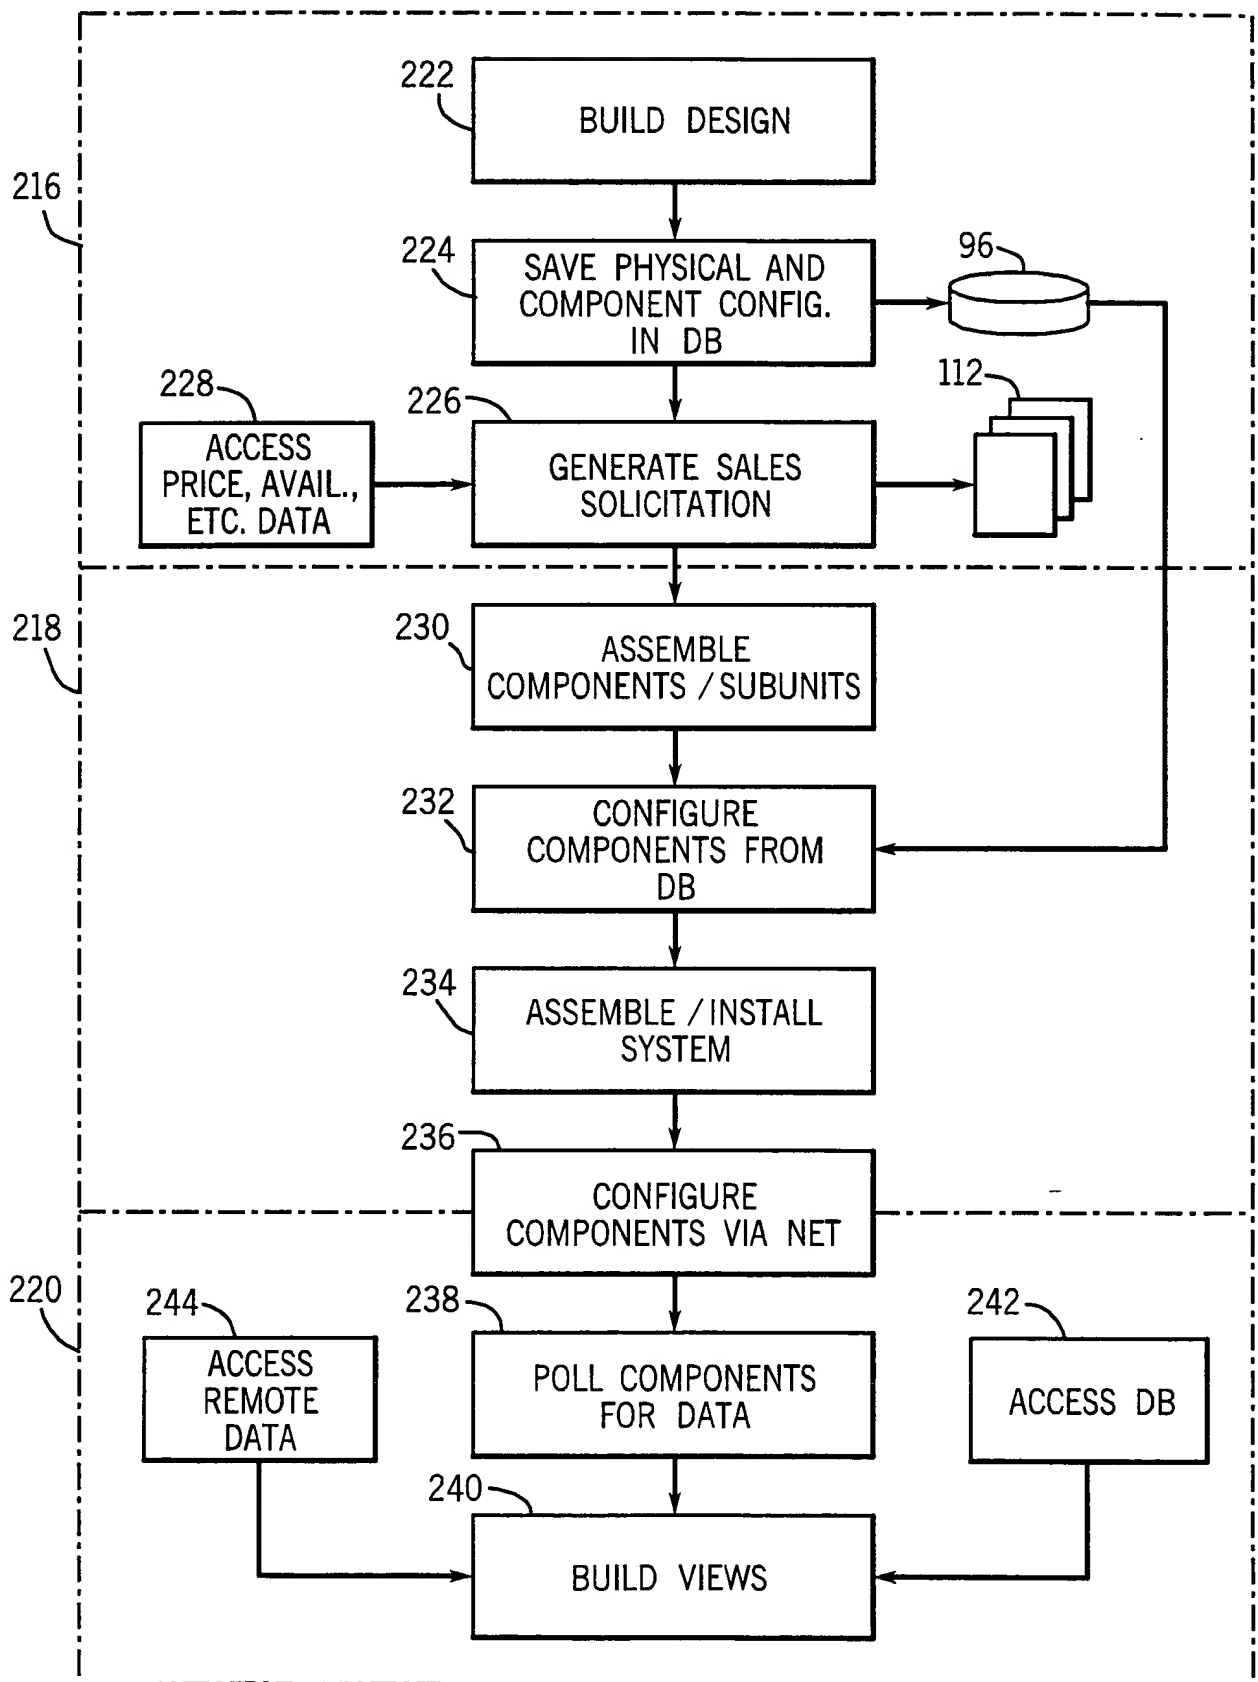


FIG. 14

214